

Sunbatt Peak&Flex compatible inverter list

Inverter Brand	Inverter model	Battery stack quantity		Minimum firmware version	
		Sunbatt Peak	Sunbatt Flex	Inverter	Sunbatt battery
Solis	S6-EH3P(3-10)K-H	2-5	3-8	≥ V02	≥ V. 1.10-1.7
	S6-EH3P(12-20)K-H	2-5	3-8	≥ V02	≥ V. 1.10-1.7
	SE-EH3P(29,9-50)K-H	2-5	3-8	≥ V02	≥ V. 1.10-1.7
	Note: When configuring the Solis inverter, please select "WTS" or "BAT" as the battery brand.				
SoSen	SSE-HH3K-6K-P1-EU	2-3	3-6	V1.17	≥ V. 1.10-1.7
	SSE-HH8K-12K-P3EU	2-5	3-8	V1.02	≥ V. 1.10-1.7
GoodWe	ET (5-10kW)	2-5	3-8	≥ ARM 13	≥ V. 1.10-1.7
	ET (15-30Kw)	2-5	3-8	≥ ARM 13	≥ V. 1.10-1.7
	BT	2-5	3-8	≥ ARM 13	≥ V. 1.10-1.7
	EH/BH	2-4	3-7	≥ ARM 07	≥ V. 1.10-1.7
	EHB	2-4	3-7	≥ ARM 03	≥ V. 1.10-1.7
	Note: When configuring the GoodWe inverter, please select "WTS" or "BAT" as the battery brand.				
Deye	SUN-(5-20)K-SG01HP3-EU-AM2	2-5	3-8	≥ 2001-C01B	≥ V. 1.10-1.7
	Note: When configuring the Deye inverter, please select "WTS" or "BAT" as the battery brand.				

Note:

Maximum 6 systems in parallel connection. For parallel connection, the below requirements must be fulfilled:

 
1. Sunbatt Peak CANNOT be parallel connected with Sunbatt Flex.
2. Each of the parallel connected systems must have the same Stack quantity.
3. Check the firmware version after installation. If the firmware version is not the latest, upgrade it to the latest firmware.
4. The Information in this document will be regularly updated without notice. Please take the latest version of this document at our website: www.sunbatt.eu.




Please scan the QR code to download the latest
version of this document.

CONNECTION OPTIONS WITH INVERTERS


1. Solis S6-EH3P(3-10)K-H

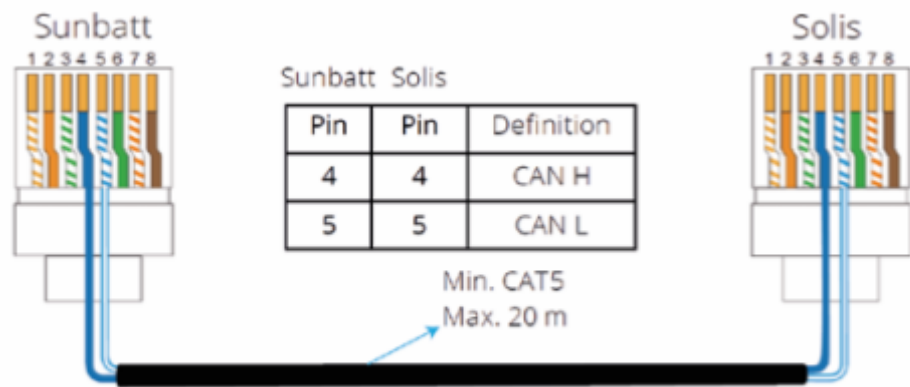

 2. Sosen SSE-HH3K-6K-P1-EU

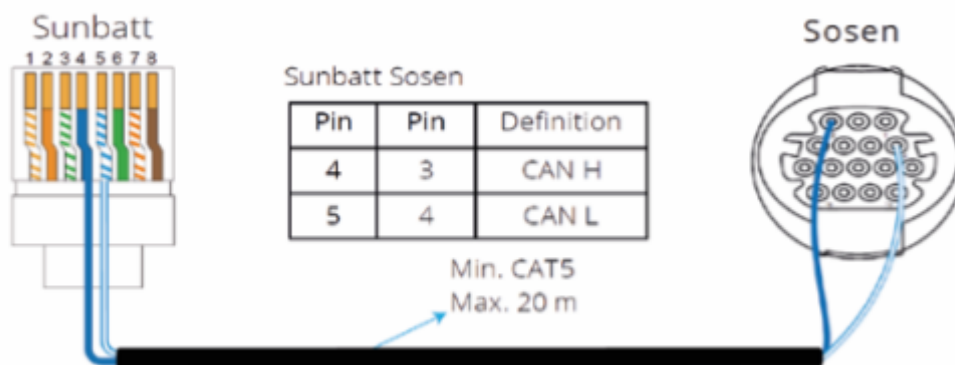


 3. Sosen SSE-HH8-12K-P3EU

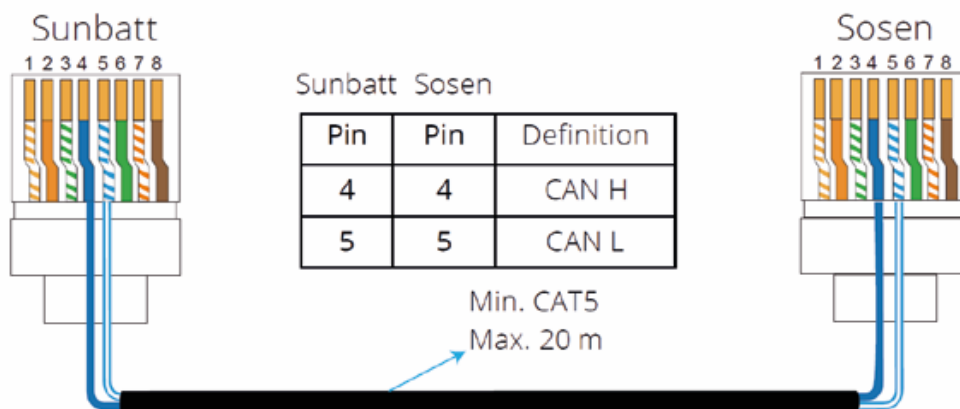

CONNECTION OPTIONS WITH INVERTERS

 4. Deye SUN-(5-20)K-SG01HP3-EU-AM2

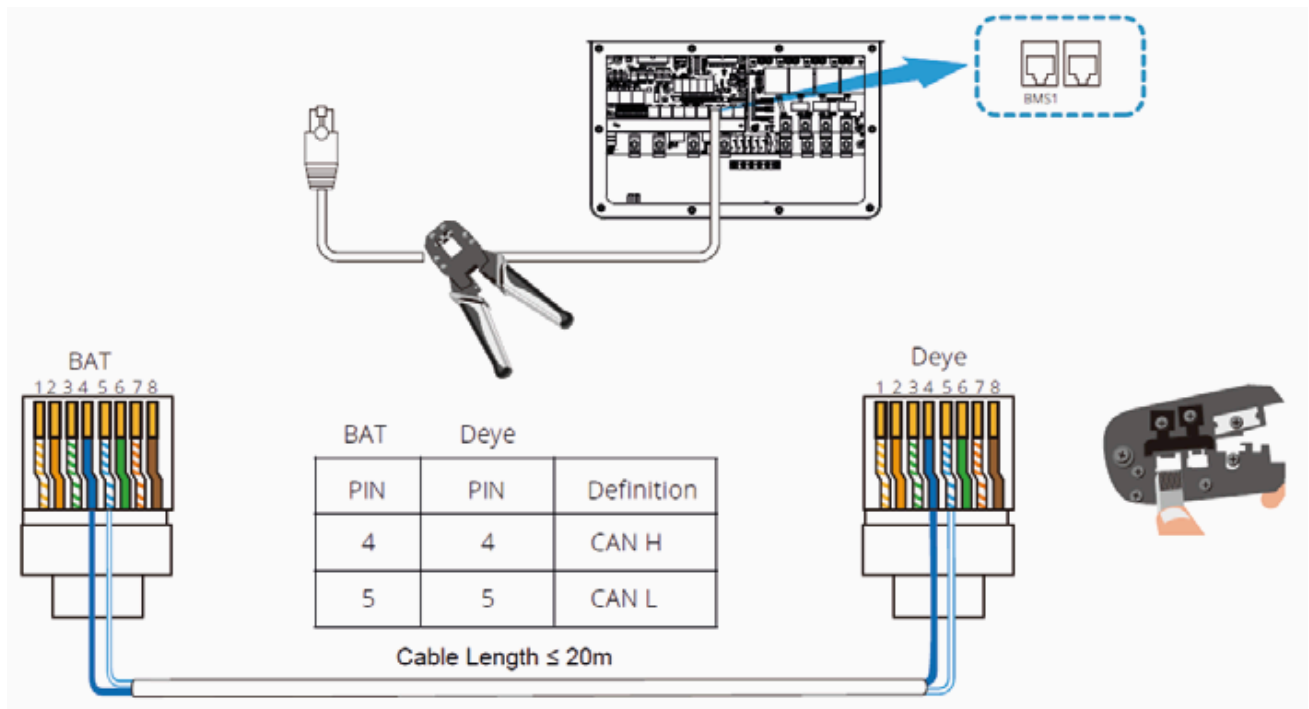

5. GoodWe ET/ BT/ EH/ BH/ EHB

